

INSTRUCTIONS for showing a film via the DVD/Blue Ray Player

IMPORTANT: THE MAINS POWER PLUG TO THE PROJECTOR MUST BE KEPT ON AT ALL TIMES, as the Projector has been pre-set to the Village Hall systems.

1. TO OPERATE THE SCREEN – Switch on power at the power socket, LHS of stage, bottom of wall and check power bank is also on. The screen remote control on wall at the LHS side of stage near the steps; Press the down arrow to lower the screen. It will stop automatically when fully down.

2. TO OPERATE SOUND AMPLIFIER- Switch on the amplifier at the socket bottom of wall, RHS of stage (marked Amplifier) – This is pre-set for the audio channel marked 11/12. The audio sound level has to be controlled manually at the amplifier.

3. TO OPERATE THE PROJECTOR and Blu Ray/DVD player.

a. Retrieve the Two Remote Controls from Projector Wall Safe. Key to the “Projector” safe is in a key box at back of stage. (ask to get the code for the key safe)

b. **Turn on the PROJECTOR in the hall using the XGIMI remote.** Point remote at the projector and press the Power On button and you will see a red light flashing at the base of projector.

A **HOME** screen will appear on the Screen. IT IS SELF FOCUSING. Using the middle button of **XGIMI** remote, move UP then RIGHT on the screen to select **Inputs**. Then select **HDMI 1** to connect the Projector to the Blu Ray Player. **(DO NOT adjust any other settings!)**

c. The **SAMSUNG** Blu Ray Player is housed in Amplifier unit. Turn on with the touch sensitive “ON” button. **Using the SAMSUNG remote control** open and insert the DVD or Blue Ray Disc, close up. (Can be done manually on the Blue Ray player or with the remote). **The Film should start automatically.**

If no sound, just switch off the power on the amplifier at the mains socket, wait 10 seconds and turn back on. Start the film again.

4. Use the **SAMSUNG remote** to control to Blu Ray Player, by pointing directly at it. That is, **to start the film**, to pause for an interval, to select subtitles from the film menu, and to stop the film.

NOTE: to enable usage from the Hall, an infra-red SIGNAL BOX has been installed, to control the Blu Ray Player with the remote; this is located at the RHS of the stage, when facing the stage from the Hall.

5. AT THE END OF THE FILM – Using the **XGIMI remote**, point at the Projector, press the RED Power Off button. A sign will appear on the screen “Switch Off”, press the RED Power Off button a second time. The red light will go off and the projector will then **turn off and cool down.**

DO NOT TURN OFF THE PROJECTOR AT THE MAINS SOCKET.

6. Finally, remove your DVD from the Blue Ray Player. Switch off the Amplifier at Mains power plug. Return the Screen to fully Up position, replace the screen remote in its holder. Return the two remotes to the Projector box, and lock it. Return key to the key safe.

HOPE YOU ENJOYED YOUR FILM